



ROLLER FRAME MOUNTING INSTRUCTIONS

THE KIT CONTAINS



x8 screw autofil tc+hi-lo 5x16




x4 screw m4x12 din7985 philips





x4 ins. Quadro m4x9,2


YOU WILL NEED

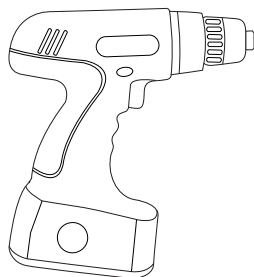


Ø 6,5 mm

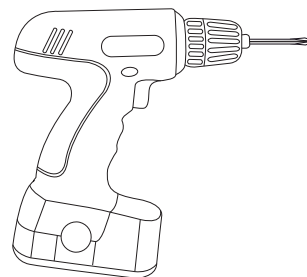


1

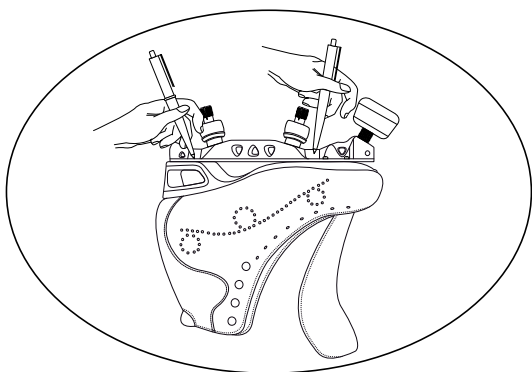


2

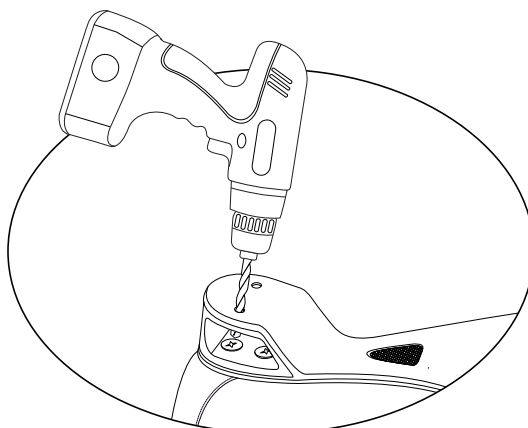


3

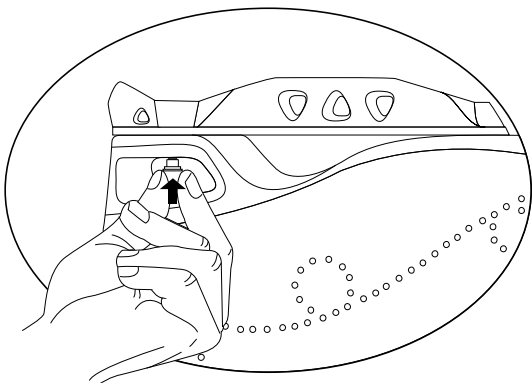

4

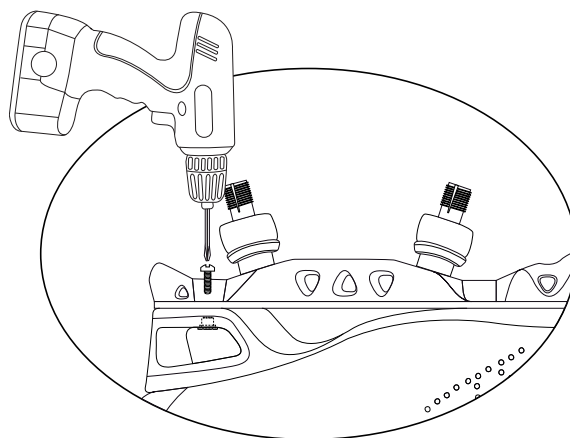

5

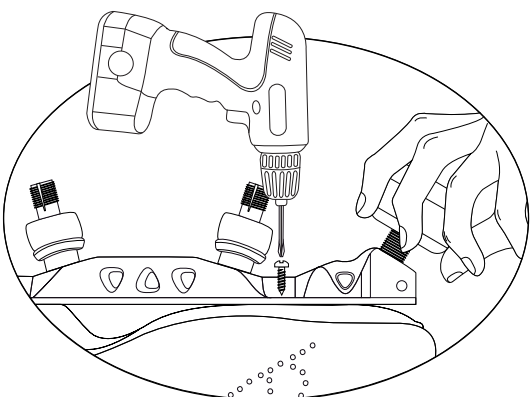

6

